




# Wicket Door Astragal

ASTRAGALS CAN BE USED TO COVER ANY AND ALL WICKET EDGES

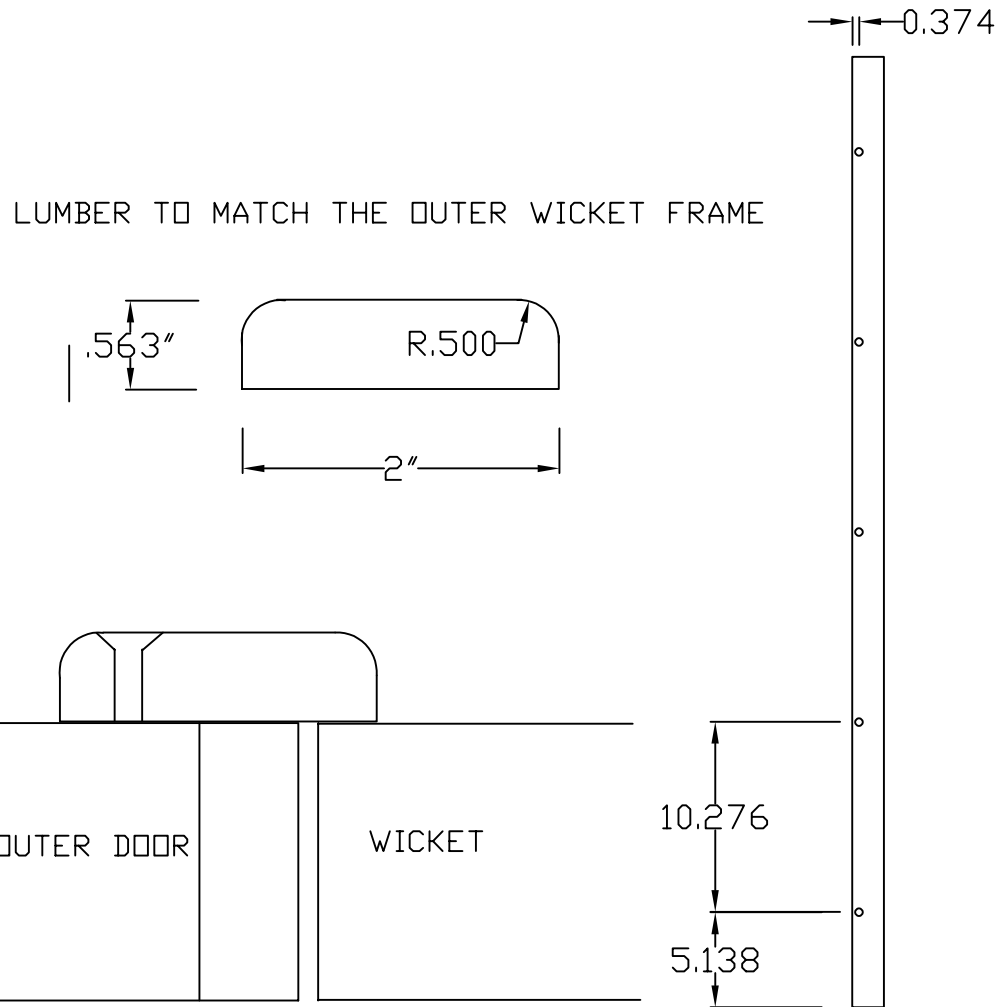

**INSTALLATION INSTRUCTIONS:**

PRE-DRILL AND COUNTERSINK HOLES FOR SIZE OF SCREW BEING USED.

SPACE SCREWS NOT TO EXCEED 6' FROM TOP AND BOTTOM WITH A MAX OF 12' APART.

OVERLAP ASTRAGAL INTO OPENING .500"

INSET SCREWS .437' FROM THE OUTER DOOR EDGE OF THE ASTRAGAL